




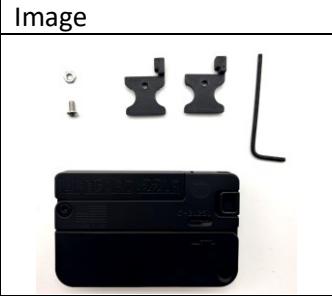


CHAD Installation Instructions

Step	Instructions	Parts	Image
1	Ensure you have all of the parts.	1 – Allen Wrench, 1 – screw, 1 – nut, 1 – CHAD top 1 – CHAD bottom & Your LifeCard	
2	Start the screw into the CHAD Top (note the CHAD Top has a circular recessed hole).	1 - screw, 1 – CHAD top	
3	Place the Top CHAD into the left side LifeCard Bolt D shaped cavity.	1 – Top CHAD with Screw Installed	
4	Place the Bottom CHAD into the right side LifeCard Bolt D shaped cavity.	1 – Top CHAD with Screw and 1 - Bottom CHAD	
5	Turn the LifeCard upside down and place a nut into the Bottom CHAD. Note: the cavity for the nut has two flats so the nut will not rotate when being tightened.	1 - nut	
6	With the LifeCard in the same position, place the Allen Wrench into the screw and rotate until tight.	1 – Allen Wrench	
7	Your installation is complete!		